


Disassembly of the LxxWD250

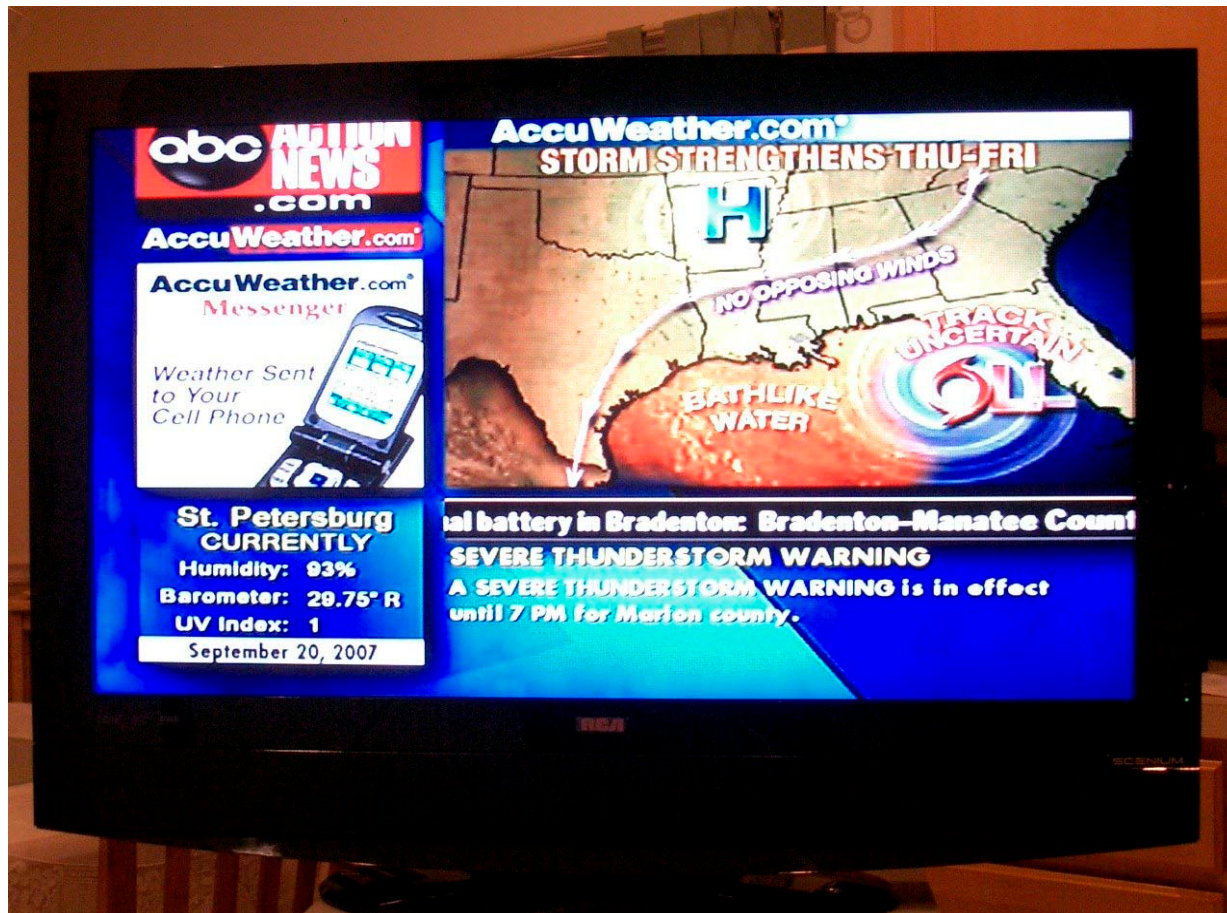


Disassembly of the LxxWD250

- Use the following disassembly instructions and you will not need to lay the unit down on it's front.



Disassembly of the LxxWD250

- Stand unit up right on work table.
- Remove all screws mark by an arrow. (8-14 depending on screen size)

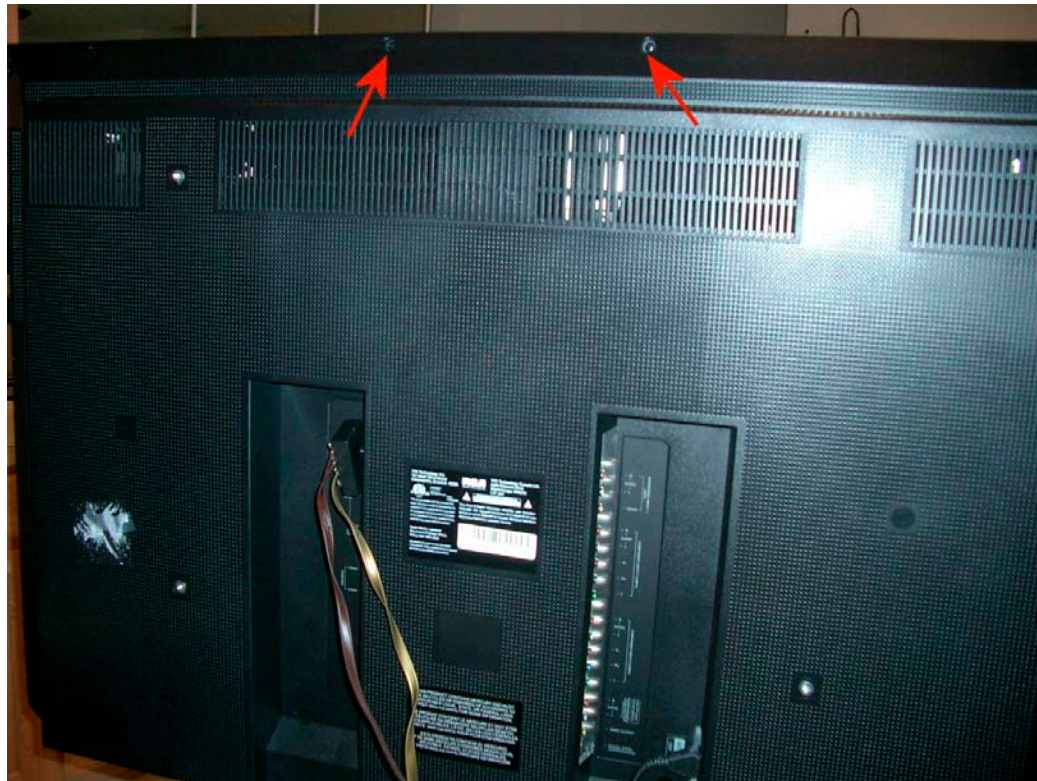


Disassembly of the LxxWD250

- Lay unit on back.



Disassembly of the LxxWD250

- Remove screws and base. (4 screws)

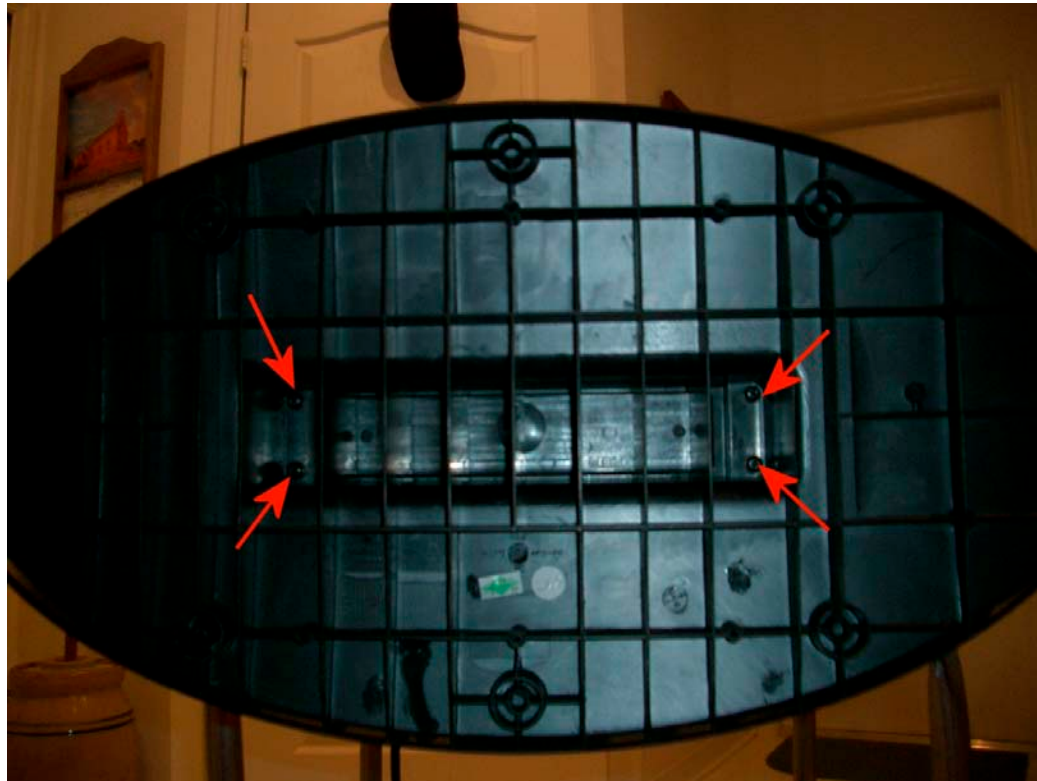

Disassembly of the LxxWD250

- From under base mounting plate remove 4 screws that hold mask (screen frame) in place.
- DO NOT remove large silver screws!




Disassembly of the LxxWD250

- Grasp bottom center of Mask (screen frame) and gently, slowly lift up and forward.



Disassembly of the LxxWD250

- Disconnect speaker wire connectors. (2 cables)
Pay attention to which wire goes to left and right speakers.

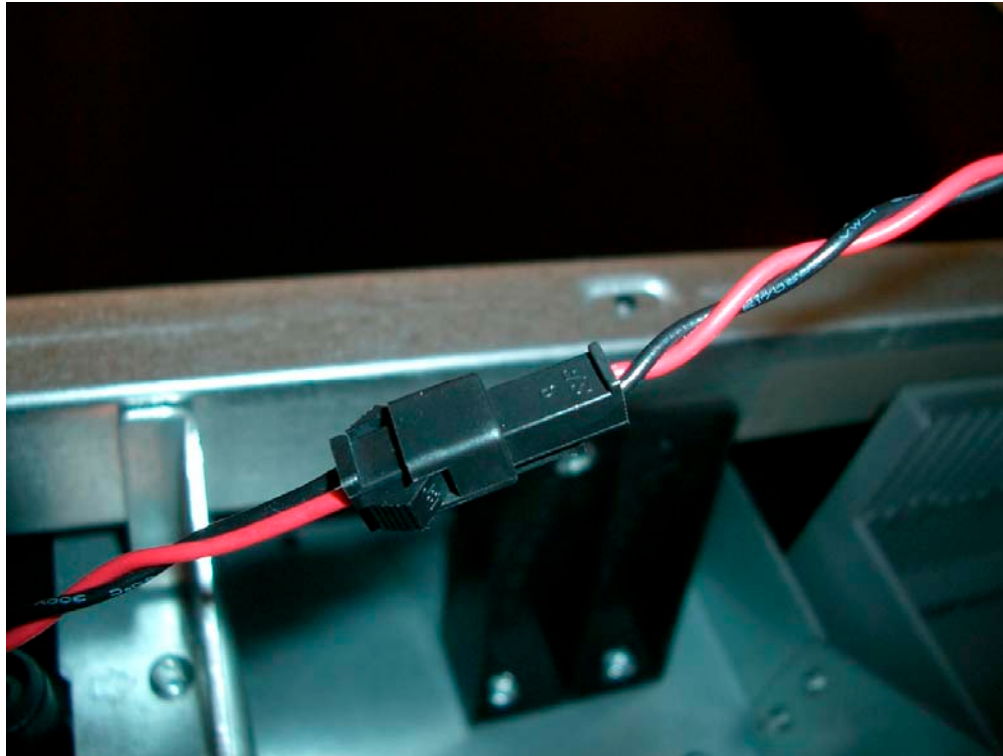


Disassembly of the LxxWD250

- Remove 2 screws from each display mount. 2 mounts on the left and the right side of display assembly. (Top right mount shown below)




Disassembly of the LxxWD250

- Remove 2 screws each from the two bottom mounts of screen display assembly.
- DO NOT Remove any other screws from unit.

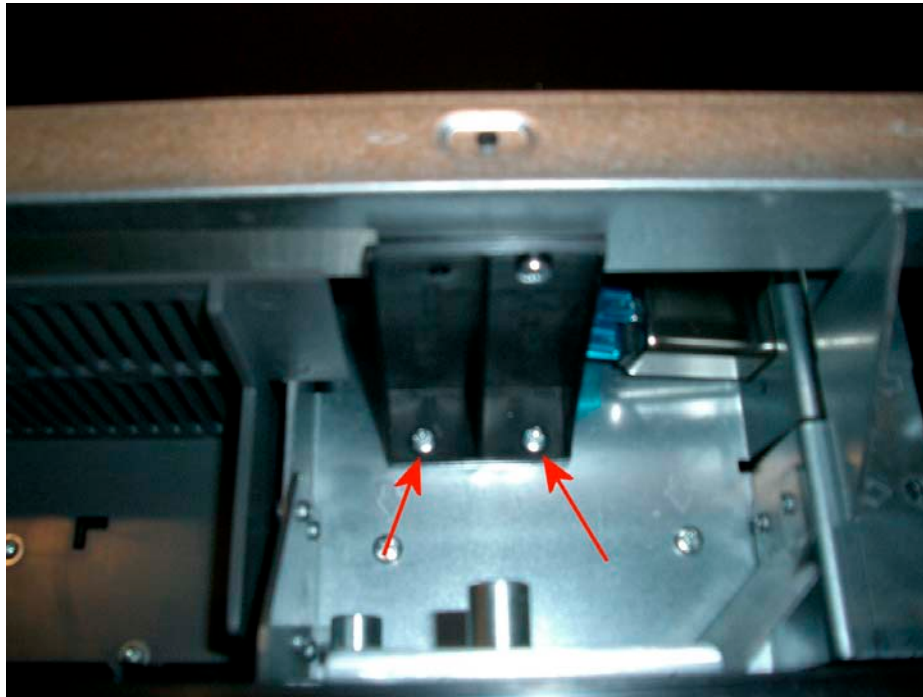


Disassembly of the LxxWD250

- Grasp bottom of display assembly and pull up and forward. Assembly will hinge upwards.
- Do not pull up more than 12 to 24 inches. Careful not to pull wires taught. You can pull plugs from connectors!

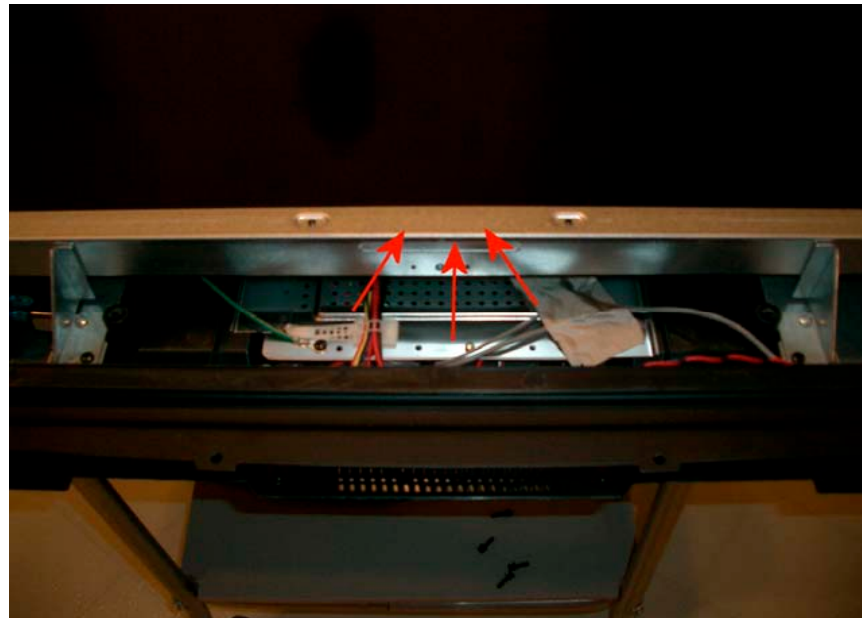


Disassembly of the LxxWD250

- Using a dowel rod or curtain rod that is 18 to 22 inches in length, $\frac{1}{2}$ inch or larger diameter, prop up display assembly as shown in picture below.

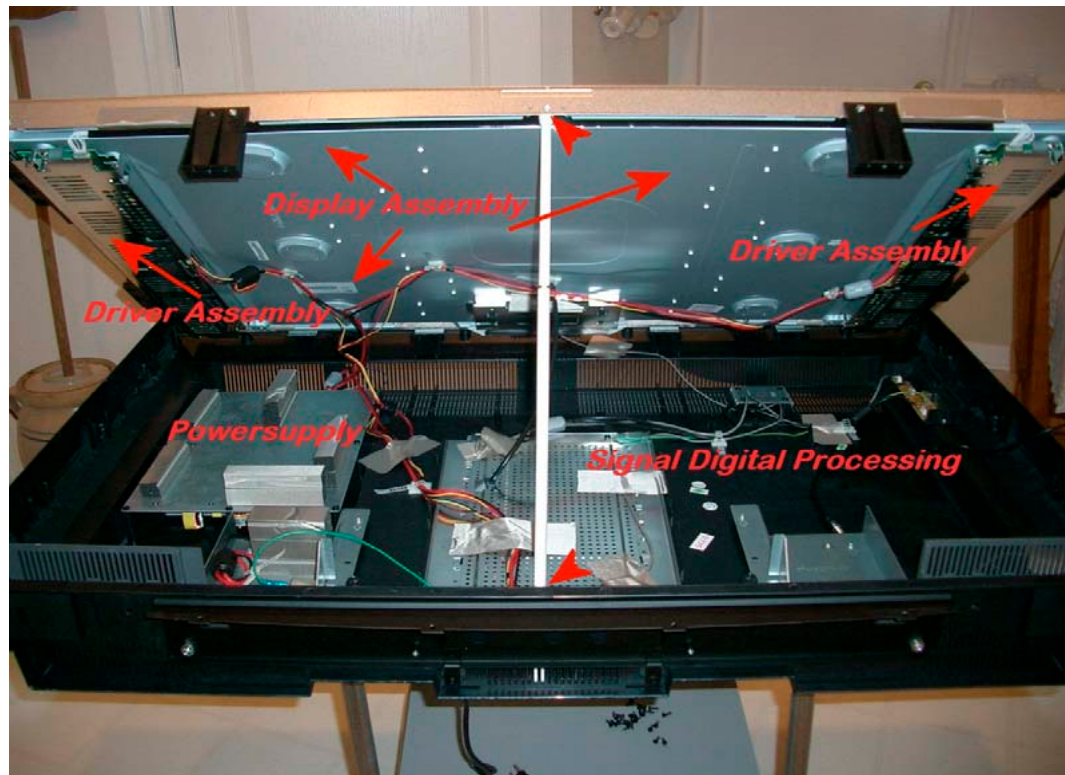

Disassembly of the LxxWD250

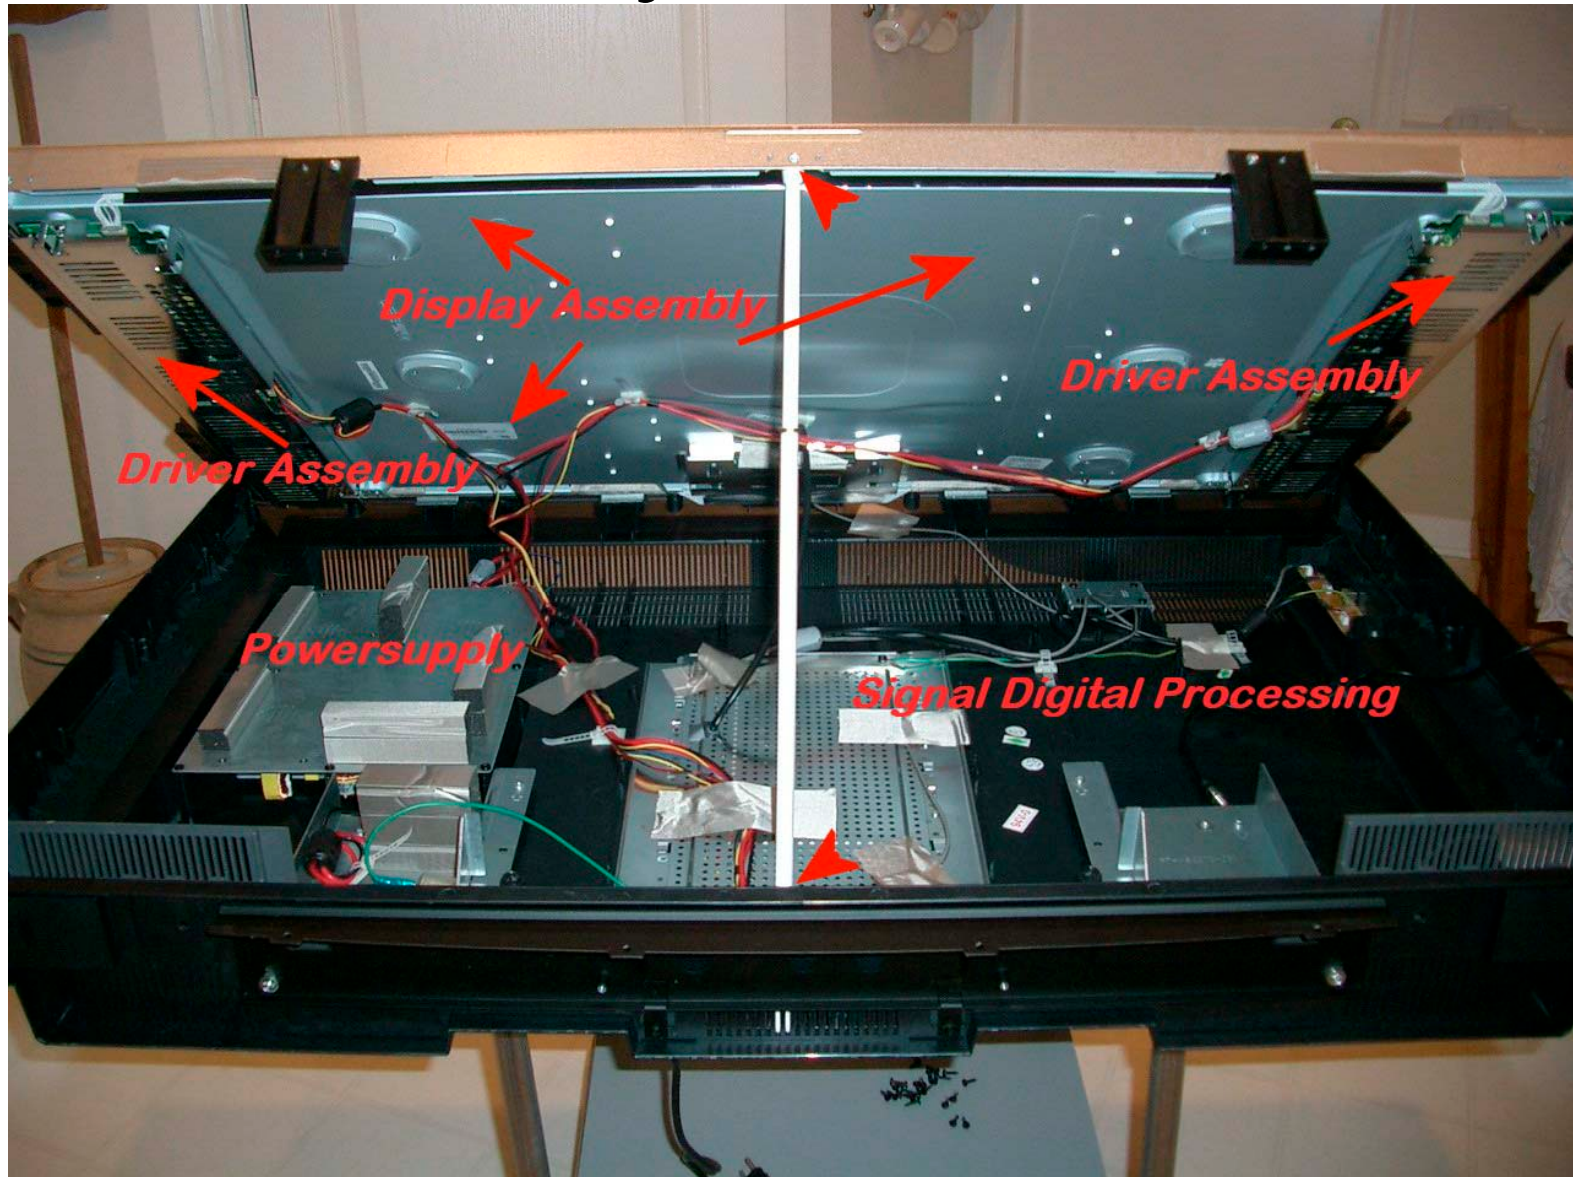

Disassembly of the LxxWD250

Careful not to pull cable too tight else plug will separate from connector!

